

Device Codes

These tables contain the manufacturer codes for programming the remote to control your TV, VCR, DVD player, or audio amplifier. Every attempt has been made to include all codes. If your device brand is not listed or if the codes do not work, the remote may not control your device. In some cases codes may operate some but not all buttons shown in this guide.

TV Codes

TV	Code
A Mark	670
Action	662
Admiral	514, 521, 605, 668, 669, 675
Aiko	727
Akai	570, 573, 659, 660
A-Mark	620
Amtron	657
Anam	509, 541, 620, 661
Anam National	651, 657, 663, 698
AOC	505, 506, 519, 520, 573, 620, 627, 652, 653, 654, 659, 664, 665, 670, 672
Archer	620
Audiovox	620, 657, 662, 672
Bell & Howell	590, 669, 675
Broksonic	562, 659, 661
Capehart	519, 627
Citizen	506, 516, 523, 524, 525, 526, 590, 652, 654, 657, 658, 680, 727
Classic	659
Colorlyme	573, 627, 652, 654, 660, 667, 668, 671, 674, 679, 681
Contec	541
Contec Cony	661, 662
Contec/Cony	655, 657, 726
Craig	536, 541, 657, 661, 662, 666, 667, 694
Crown	526, 536, 657, 666, 670
Curtis	659, 674
Curtis Mathes	506, 516, 526, 573, 590, 650, 652, 654, 658, 660, 664, 665, 667, 668, 670, 680, 703, 708
Daewoo	505, 524, 526, 529, 530, 531, 573, 652, 653, 654, 658, 659, 663, 664, 665, 670, 672, 674, 684, 698, 719, 727

TV	Code
Daytron	526, 627, 652, 654, 658, 665, 670, 672
Dimensia	650
Dixi	566, 620
Dumont	501, 627, 652
Echostar	722
Electrohome	526, 573, 651, 652, 654, 656, 659, 660, 665, 670, 709, 728
Emerson	526, 534, 535, 536, 537, 538, 539, 541, 573, 590, 627, 652, 654, 655, 657, 658, 659, 660, 661, 662, 665, 666, 667, 669, 670
Envision	506, 573, 652, 654, 660, 664
Fisher	542, 590, 683
Fujitsu	534, 682, 694
Funai	534, 541, 657, 661, 662, 677, 682, 694
GE	508, 509, 543, 544, 630, 650, 651, 652, 654, 659, 661, 663, 665, 667, 668, 670, 673, 676, 681, 690, 691, 698, 701, 715, 716
Goldstar	505, 523, 526, 545, 546, 566, 573, 652, 653, 654, 655, 656, 658, 659, 660, 664, 665, 670, 671, 678, 693, 730
Gradiente	660, 671
Granada	627, 670, 671
Grundig	670, 673
Hallmark	627, 652, 654, 659
Harman Kardon	659
Harman/Kardon	561
Hinari	534
Hitachi	523, 526, 548, 549, 553, 554, 555, 585, 597, 626, 652, 654, 655, 665, 668, 669, 670, 672, 673, 702, 718, 726
Infinity	066, 671
JBL	566, 671

TV	Code
JC Penney	505, 506, 516, 525, 526, 543, 546, 631, 650, 652, 653, 654, 658, 659, 664, 667, 668, 670, 673, 676, 678, 680, 690, 691, 725
JCPenney	701
Jensen	556, 573, 652, 654, 660
JVC	508, 557, 559, 655, 667, 673, 676, 726
Kawasho	548, 561, 573, 652, 654, 664
Kenwood	506, 573, 652, 654, 656, 659, 660, 664, 679, 681
Kloss Novabeam	657, 663, 698, 723, 724
KTV	526, 539, 541, 573, 657, 658, 661, 662, 664, 665, 670, 696,
Lloyds	627, 679
Loewe	566
Logik	675
Luxman	523, 652, 654,
LXI	563, 566, 590, 595, 617, 631, 650, 654, 659, 668, 678, 683, 691, 701, 725
Magnasonic	573, 659, 660, 669, 672, 677
Magnavox	506, 520, 525, 536, 566, 567, 568, 573, 610, 652, 654, 656, 659, 660, 664, 665, 666, 669, 671, 673, 674, 677, 723, 724, 729
Majestic	675
Marantz	506, 566, 573, 652, 654, 660, 664, 665, 671, 678, 681
Megatron	627, 654
Memorex	590, 627, 653, 654, 659, 675, 678, 720
MGA	504, 505, 506, 542, 571, 573, 627, 652, 653, 654, 656, 660, 728
Mitsubishi	573

Device Codes

TV	Code
Mitsubishi	504, 505, 542, 570, 571, 572, 597, 623, 627, 652, 653, 654, 656, 659, 660, 664, 665, 670, 671, 705, 728
Montgomery Ward	675
Motorola	521, 605, 651
MTC	505, 506, 516, 523, 573, 627, 652, 653, 654, 659, 664, 667, 672, 680
Multitech	657
NAD	502, 617, 627, 631, 654
National	509
NEC	505, 506, 507, 517, 523, 573, 627, 651, 652, 653, 654, 660, 664, 665, 679, 681, 731, 732
Nikkai	612
Nikko	654, 672, 727
Onwa	541, 657, 661
Optonica	521, 605, 607
Orion	694
Osaki	612
Panasonic	508, 509, 510, 512, 566, 651, 662, 663, 668, 672, 673, 676, 685, 689, 698, 700, 716
Philco	505, 506, 525, 536, 568, 573, 610, 651, 652, 653, 654, 655, 656, 659, 660, 664, 665, 666, 669, 671, 672, 674, 677, 723, 724
Philips	525, 566, 651, 652, 655, 656, 671, 690, 723, 724, 729
Pioneer	502, 548, 576, 652, 654, 663, 665, 681, 708
Portland	505, 526, 573, 652, 654, 658, 659, 664, 665, 670, 727
Price Club	680
Prism	676
Proscan	650, 668, 691, 725
Proton	513, 519, 526, 536, 585, 627, 652, 654, 655, 659, 660, 665, 666, 668, 670, 678
Quasar	508, 509, 651, 663, 673, 676, 698, 700
Radio Shack	526, 541, 607, 612, 661, 662, 663, 668, 670, 698
Radio Shack/Realistic	590, 607, 650, 652, 654, 655, 657, 658, 683, 730

TV	Code
RCA	503, 505, 548, 586, 630, 633, 634, 650, 651, 652, 653, 654, 656, 661, 663, 665, 667, 668, 670, 681, 691, 698, 701, 708, 715
Realistic	590
Runco	501
Sampo	506, 519, 652, 654, 658, 663, 664, 665, 698, 730
Samsung	505, 506, 516, 523, 526, 566, 573, 612, 627, 652, 653, 654, 655, 656, 658, 659, 664, 665, 667, 669, 670, 679, 680, 704, 717
Sanyo	542, 590, 652, 683
SBR	566
Schneider	566
Scott	526, 534, 537, 541, 600, 652, 654, 655, 657, 661, 662, 665, 670, 677, 682, 696, 701
Sears	523, 534, 542, 563, 590, 595, 601, 604, 617, 627, 631, 650, 652, 654, 656, 659, 661, 668, 670, 682, 683, 688, 691, 703, 725
Sharp	521, 526, 585, 605, 607, 628, 629, 652, 654, 655, 658, 669, 670, 674, 679
Signature	675
Solavox	612
Sony	500, 578, 670, 690
Soundesign	525, 536, 541, 627, 652, 654, 657, 659, 661, 665, 666, 682,
Starlite	657
Supra	523
Sylvania	506, 525, 536, 566, 568, 569, 573, 600, 610, 652, 654, 656, 659, 660, 664, 665, 666, 671, 672, 674, 677, 723, 724, 729, 733
Symphonic	632, 657, 662, 677, 692, 694
Tandy	521, 605
Tatung	509, 651, 663, 698,
Technics	508, 673, 676
Techwood	523, 573, 652, 654, 660, 676

TV	Code
Teknika	504, 505, 512, 516, 523, 524, 525, 526, 534, 536, 541, 573, 652, 653, 654, 655, 657, 658, 661, 662, 664, 665, 666, 670, 672
Telefunken	679
Toshiba	516, 590, 617, 631, 667, 678, 680, 683, 688
Totevision	526, 658, 668
Ultra	672
Universal	543, 690
Vector Research	506
Video Concepts	570, 661
Wards	536, 573, 607, 650, 652, 653, 654, 656, 659, 664, 665, 666, 667, 668, 669, 674, 675, 677, 678, 682, 690, 715, 723, 724, 729
White Westinghouse	659, 664, 670, 672, 674
Yamaha	505, 506, 573, 652, 653, 654, 656, 664, 666, 672, 679,
Zenith	501, 652, 672, 675, 693

VCR Codes

VCR	Code
Denon	686
Dimensia	607
Dumont	549
Electrohome	512, 676, 687
Emerson	505, 506, 508, 509, 511, 512, 534, 559, 568, 588, 590, 618, 676, 678, 684, 687
Finlandia	549
Finlux	549, 556, 588
Fisher	548, 549, 581, 584, 588, 608, 610, 684, 688
Fuji	678
Funai	588
Garrard	588
GE	550, 551, 552, 554, 572, 591, 605, 607, 675, 678, 679
Go Video	557, 558, 620, 685
Goldstar	592, 594, 676, 687
Goodmans	585, 589
Gradiente	588, 687
Granada	549, 581

Chapter 5

Reference

VCR	Code
Grundig	556
Harman Kardon	568, 592
Harwood	181
Hinari	589
Hitachi	536, 538, 539, 540, 588, 595, 597, 680, 682, 686
ITT	518
JC Penney	554, 581, 591, 592, 594, 595, 600, 674, 675, 676, 678, 679, 680, 681, 685, 686, 687
Jensen	595, 680, 682
JVC	561, 562, 563, 581, 592, 594, 600, 674, 682, 686
Kenwood	562, 581, 592, 594, 600, 674, 677, 682, 683
KLH	681
Kodak	676, 678
Lloyds	683, 688
Logik	589, 681, 685
Luxor	518
LXI	676
Magnasonic	685, 687
Magnavox	527, 533, 554, 556, 678, 679, 684, 685
Marantz	554, 556, 581, 585, 592, 594, 600, 602, 674, 677, 678, 683
Matsushita	678
Memorex	507, 533, 549, 554, 566, 581, 585, 588, 608, 675, 676, 678, 686, 687, 688
MGA	512, 567, 568
Minolta	595, 680, 686
Mitsubishi	512, 562, 567, 568, 570, 571, 595, 680, 687
Motorola	678
MTC	544, 588, 675, 685
Multitech	579, 588, 675, 677, 681
NAD	573
NEC	562, 581, 592, 594, 600, 602, 674, 677, 682, 683
Nikko	676
Noblex	675
Olympus	678
Optimus	676, 687
Optonica	585
Orion	506, 684, 687

VCR	Code
Panasonic	523, 554, 598, 614, 628, 633, 678, 679, 684, 685, 688
Pentax	592, 595, 677, 680, 683, 686
Pentex Research	594
Perdio	588
Philco	554, 678, 679, 686
Philips	554, 556, 585, 678, 684
Pioneer	562, 573, 574, 575, 576, 600, 674, 680
Portland	546, 677
Proscan	605, 607
Proton	685
Quasar	554, 678, 679
Radio Shack	512, 607, 608, 610, 687
Radio Shack/Realistic	581, 584, 588, 608, 675, 676, 678, 679
Radix	676
RCA	518, 525, 527, 528, 591, 595, 605, 607, 615, 631, 649, 675, 678, 680, 686
Realistic	534, 549, 554, 581, 584, 585, 588, 608, 675, 678, 679, 687, 688
Ricoh	502
Runco	533
Saisho	506
Salora	567, 581
Samsung	515, 517, 534, 579, 591, 675
Sansui	544, 562, 600, 674, 682, 685
Sanyo	549, 581, 582, 583, 608, 675, 688
SBR	556
Schneider	589
Scott	508, 534, 559, 590, 684, 687
Sears	548, 549, 581, 584, 595, 608, 610, 676, 678, 680, 683, 684, 686, 687, 688
Sentra	546
Sharp	512, 585, 607, 625
Shintom	589, 595, 681, 685
Singer	678, 681, 685
Sony	500, 501, 502, 504
STS	678
Sylvania	554, 556, 567, 588, 678, 679
Symphonic	588, 594, 683, 688

VCR	Code
Tandy	581, 588
Tashiko	588, 676
Tatung	594, 682
Teac	588, 594, 682
Technics	554, 633, 678
Teknika	554, 588, 676, 678, 687
Toshiba	534, 535, 567, 584, 590, 680, 684, 688
Totevision	591, 675, 676, 687
Unitech	675
Vector Research	534, 592, 600, 674, 677, 683
Video Concepts	534, 568, 592, 600, 674, 677, 683
Wards	534, 588, 595, 608, 675, 676, 678, 680, 681, 684, 687, 688
XR-1000	588, 678, 681
Yamaha	581, 592, 594, 600, 674, 682, 683
Zenith	500, 501, 533

TV/VCR Combo

TV/VCR Combo	Code
Action	640
Broksonic	642
Daewoo	636
Emerson	642, 643
GE	637
Goldstar	638
Panasonic	638
Precision	640
Quasar	638
Realistic	641
Sony	639
Toshiba	635
Zenith	638

DVD Player Codes

DVD	Code
Aiwa	634
Alpine	653
Apex	654, 655
Broksonic	656
Daewoo	657

DVD	Code
Emerson	658
Fisher	659
Funai	658
Hitachi	632, 635, 660
JVC	636
Konka	637, 638
Magnavox	626, 661
Mitsubishi	629
Panasonic	639, 662, 663
Philips	640, 641
Pioneer	665
RCA	627, 650, 666
Samsung	651, 652, 668
Sanyo	643
Sharp	669
Sony	617, 644, 645, 670, 671
Sylvania	658
Toshiba	616, 646, 647, 672
Zenith	648, 673

DVD/VCR Combo	Code
Samsung	667, 691

TV/DVD Combo

TV/DVD Combo	Code
Aiwa	644
Broksonic	645
Konka	646
RCA	647
Sansui	648
Toshiba	649

Tuner/Amplifier Codes


Audio	Code
Aiwa	656, 687, 718, 720, 724, 725, 726
Carver	653
Citizen	709
Curtis Mathes	734
Denon	674
Fisher	653, 741
GE	711
Goldstar	677, 690
Harmon Kardon	672
Hitachi	717
JVC	683, 703, 725
Kenwood	676, 691, 726, 728, 745
Magnavox	654, 705, 740
Marantz	651, 740, 742, 743
NAD	739

VCR/DVD Combo

DVD/VCR Combo	Code
Go Video	692
JVC	689
RCA	690

Chapter 5

 Reference



Notes